



## SIGNAL HOOKUP

Determine which SIGNAL input to use (**SIG 1** or **SIG 2**). **Only connect ONE signal input.** If you are unsure which SIGNAL input to use connect your signal source to SIG 1.

### "Clean" Tach Signal

Connect the signal wire from the signal source to SIG 1 if you are using a tach signal from any of the following: ignition with tach output terminal, ECU, tach adapter, other "clean" tach signal source



### Ignition Coil (-)

if you are using a signal from an ignition coil (-), connect the signal wire from the coil negative (-) to SIG 2.

