

1982-84 Firebird Installation



Pic#1

Start by removing the screws from the lower trip piece.



Pic#3


Remove the screws from the dash panel.



Pic#4


Next, remove the screws from the gauge cluster.

1982-84 Firebird Installation

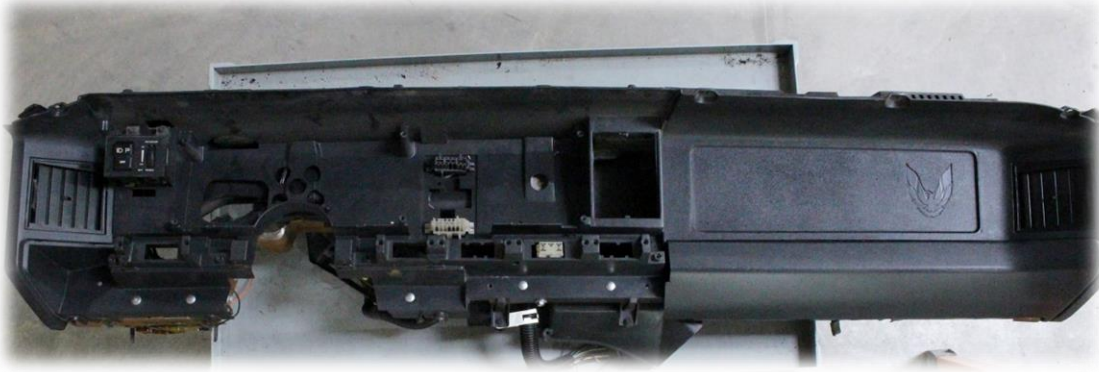

Pic#5

Remove gauge cluster and disconnect speedo cable. Get ready to start your install!

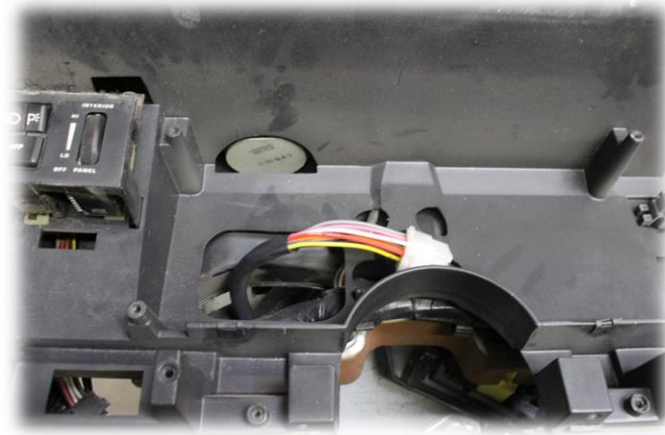

Pic#6


Install the car side plug of the wiring harness.



Pic#7

You will need to drill using a #10 drill bit (.193) in the dash frame in 3 different places with the supplied template.

1982-84 Firebird Installation

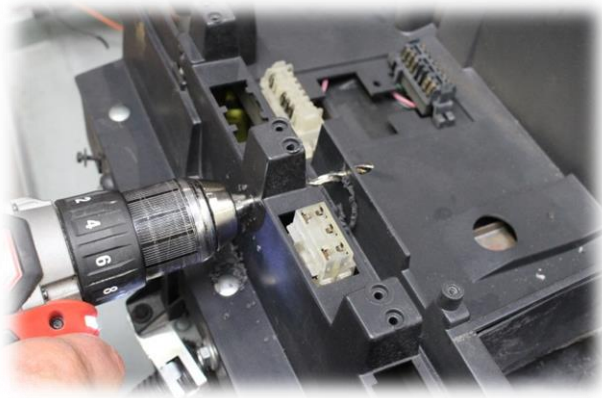

Pic#8

The threaded hole will need to be drilled twice (See pic #8 - #9).
First, use a #10 drill bit (.193) to drill the first hole.



Pic#9

Then you will need to drill one more time with a 3/8" drill bit to allow a screwdriver to access the screw. Only drill through the front & back frame.
See pic #9.



Pic#10

Time to install the U-clips where you drilled your 3 new holes. Make sure they line up with holes. See pic #10.

1982-84 Firebird Installation



Pic#11

Time to fit the dash! Check all the holes you drilled and make sure they line up.




Pic#12



Pic#13

Time to start installing your new gauges and LED lights in the dash you will need a 5/32" drill bit to install the LED lights.

1982-84 Firebird Installation

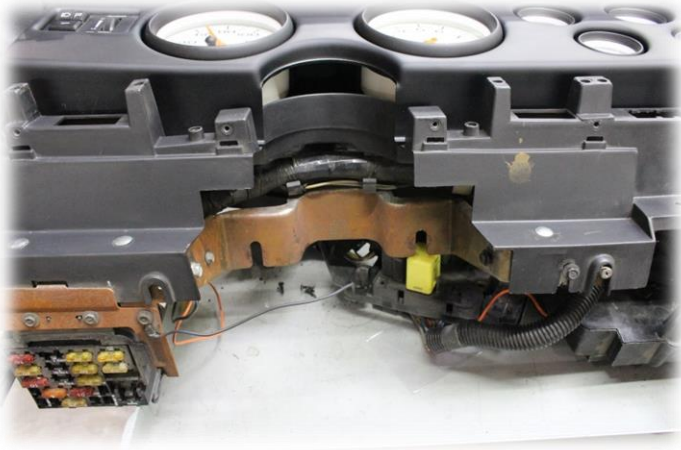

Pic#14

After installing the gauges & wiring harness, reinstall into dash carrier. Make sure you plug in and connect the male & female halves of the wiring harness.



Pic#15

Check for fit. Reinstall all screws and tighten.



Pic#16

Reinstall screws in the top of the dash and tighten.

1982-84 Firebird Installation



Pic#17

Reinstall lower trim and tighten screws.



Pic#18



Pic#19

And you are done !!!!!