

2008-11 Subaru Impreza Installation Instructions

Step 1: Remove the hood.




Step 2: Unbolt and remove gauge cluster.



Step 3: Remove gauge cluster from the white back piece.


Step 4: You will need to modify the white back piece to get the dash panel to fit.

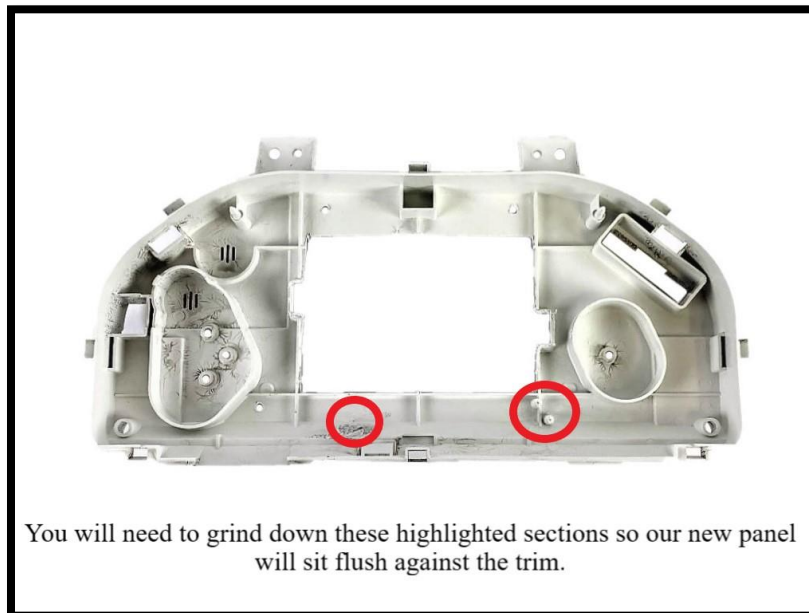

You will need to grind down these highlighted sections so our new panel will sit flush against the trim.

2008-11 Subaru Impreza Installation Instructions

Step 5: Place template (included) over the back of the white back piece.

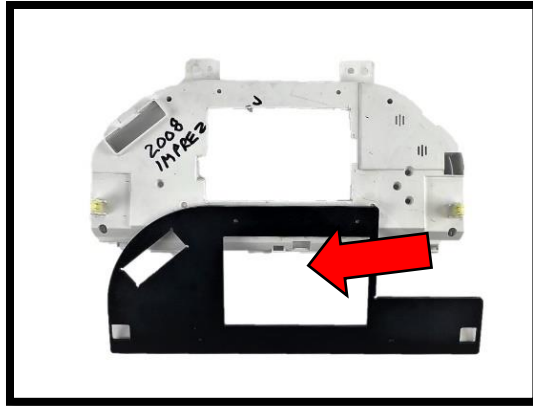

Step 6: Follow included template and cut out middle of the white back piece.

Step 7: Drill four .149" diameter holes in the places pictured below.



Step 8: Remove the template and clean off white back piece of any excess debris.



2008-11 Subaru Impreza Installation Instructions

Step 9: Install AEM digital dash into Classic Dash panel.



Step 10: Attach Classic Dash panel to white back housing using included attachment screw kit.



Step 11: Re-attach the hood in the dash carrier, without the glass lens.



Step 12: Place Classic Dash panel and AEM assembly back into dash carrier.

