


1998-04 Chevy S-10 Truck Instructions

- Push screws through spacers and install them as shown below. Only thread down a few threads so there is room from the top of the spacers to the bottom of the head on the screw.

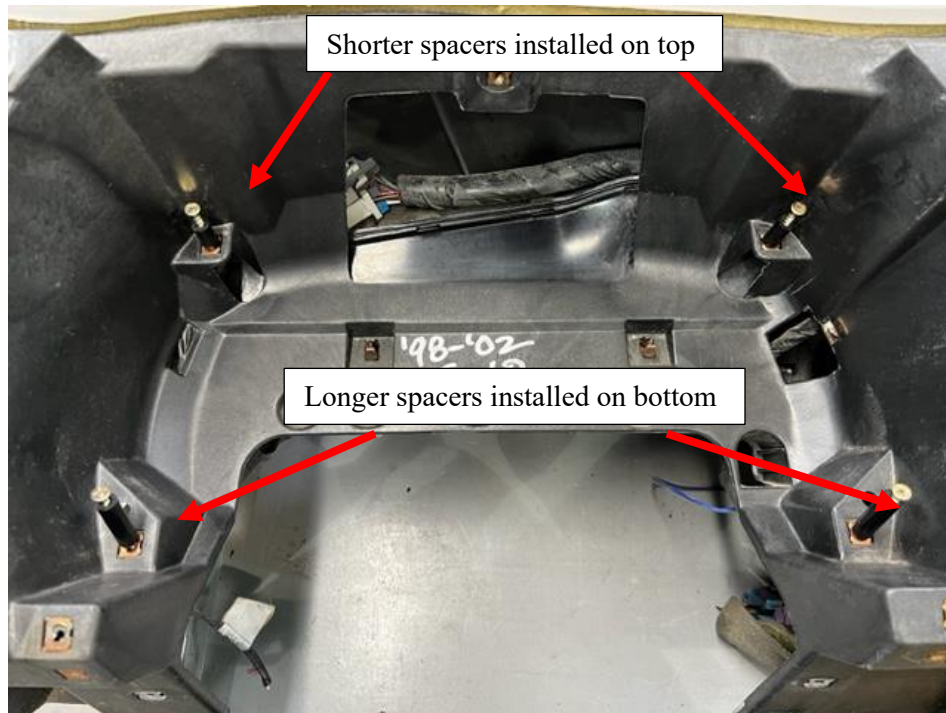

- Slide the bottom part of the brackets in all the way, between the top part of the spacer and bottom of screw head, as shown below.



- Push the top part of the brackets in all the way, between the top part of the spacer and bottom of screw head, until they are hitting the top of the dash as shown below. Tighten screws.

