


Holley 12.3" Installation

STEP 1: Lean the dash against a solid surface. While looking at the back of the dash, pull the left and right brackets all the way out towards you.

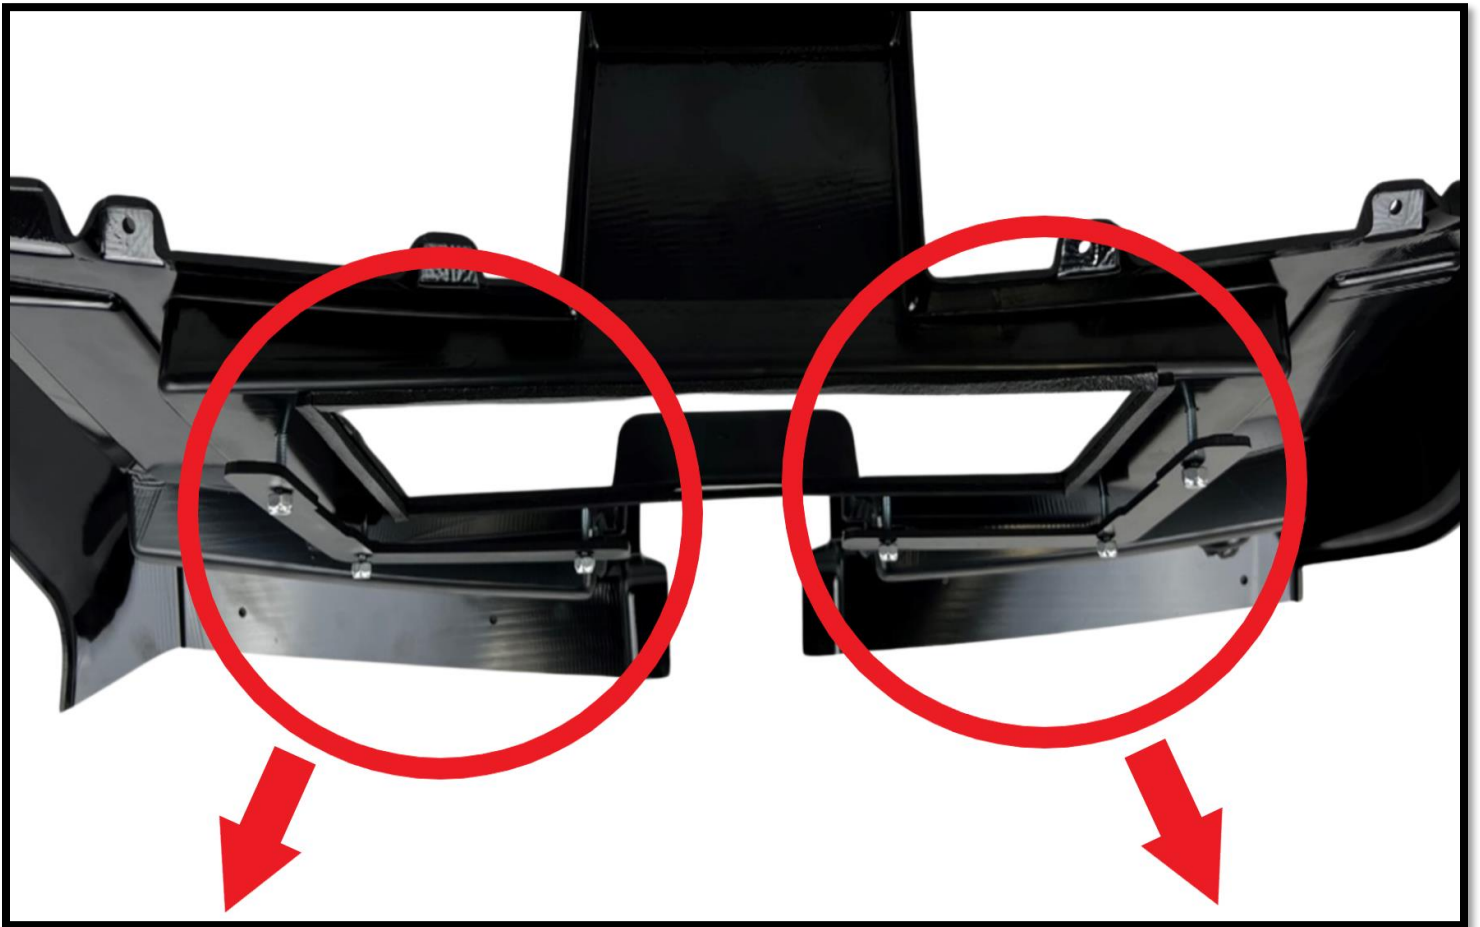

Holley 12.3" Installation

STEP 2: Position the front of the Holley 12.3" unit (screen side) away from you and align it with the brackets. The Holley unit is meant to slide in between the brackets and the dash panel.




The Holley unit should be installed as shown below.



Holley 12.3" Installation

STEP 3: Use a Phillips head screwdriver and hold the nut with a wrench or pliers and tighten. Tighten until the stopper is snug against the dash as shown below.

NOTE: Make sure that the Holley screen is properly aligned **BEFORE** you tighten down the screws!

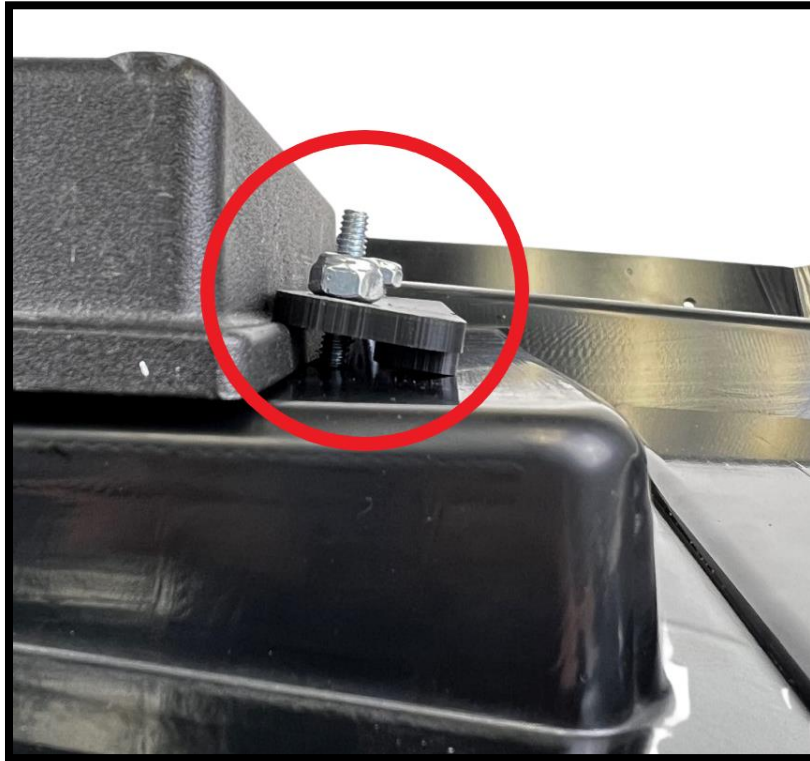

Holley 12.3" Installation

STEP 4: Snap on all of the screw cap covers. These will require a firm pressure to press them on. Your installation is now complete!

