

Classic Dash

PN # 200-00-3000


GM /MOPAR Mechanical Speedometer Adapter

Most stock GM OE speedometer cables will NOT directly fit onto the Auto Meter 5/8" x 18" threaded mechanical speedometer. This adapter will connect the stock GM OE speedo cable to the Auto Meter Mechanical Speedometer.


1. Make sure that you have the machined aluminum adapter and extension pin below:



2. Put the extension pin onto the speedo cable.

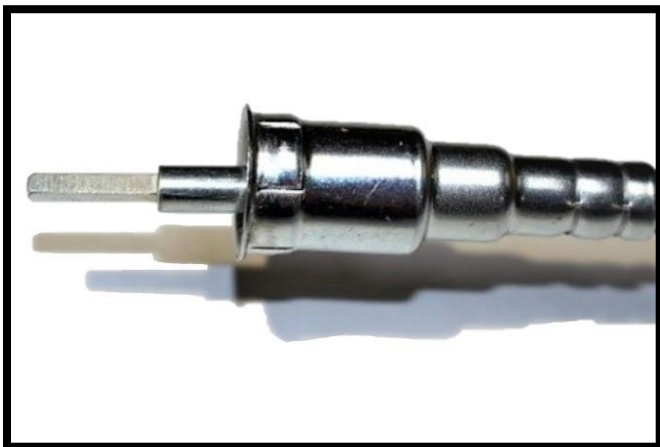

3. Slide the machined aluminum adapter over the end of the speedometer cable. You may have to gently pull the spring clip toward the knurled portion of the adapter to fully seat the unit.

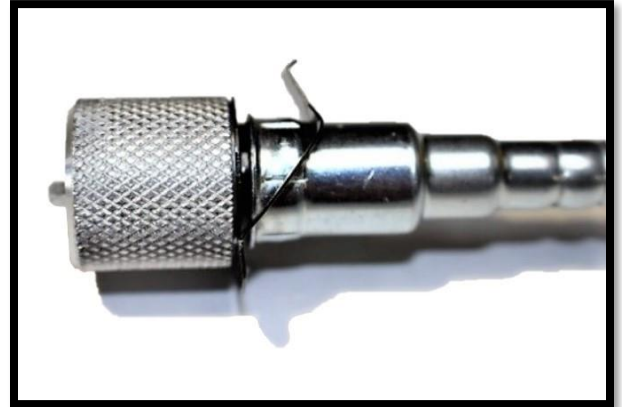

4. Screw the adapter unit and speedometer cable onto the back of the auto meter mechanical speedometer. Be careful not to let the extension pin fall out. If it does, you can re-insert it into the machined adapter without removing it.

If you have any problems with the installation, please call our tech support line at: (775) 883-7904 Monday - Friday from 7:30am PT – 4pm PT.